
RESURE TO REMOVE ALL PACKAGING MATERIALS BEFORE INSTALLING YOUR NEW MAXXFAN!

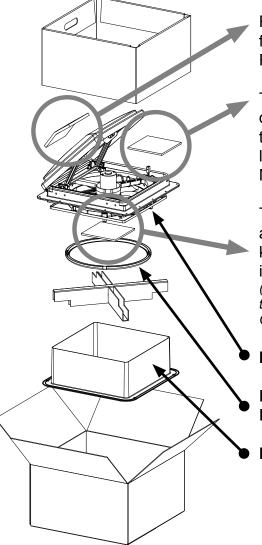

AIRXCEL

Remove protective plastic film from top of lid and discard Foam Pad #1.

To remove Foam Pad #2 on top of motor, open the lid by using the MANUAL OPENING KNOB located on the underside of the MAXXFAN.

To remove Foam Pad #3, rotate all 4 insect screen retaining knobs 1/2 turn to remove the interior insect screen. (For additional information, refer

to your MAXXFAN Information and Operating Guide)


MAXXFAN

INTERIOR INSECT SCREEN

ROOF FLANGE



BE SURE TO REMOVE ALL PACKAGING MATERIALS BEFORE INSTALLING YOUR NEW MAXXFAN!

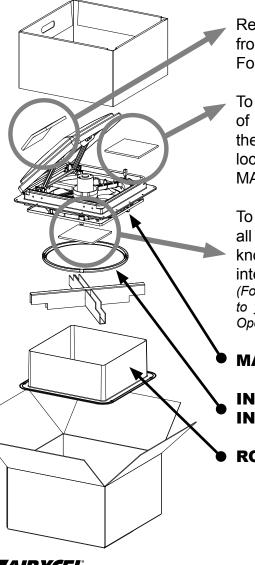

Remove protective plastic film from top of lid and discard Foam Pad #1.

To remove Foam Pad #2 on top of motor, open the lid by using the MANUAL OPENING KNOB located on the underside of the MAXXFAN.

To remove Foam Pad #3, rotate all 4 insect screen retaining knobs 1/2 turn to remove the interior insect screen.

(For additional information, refer to your MAXXFAN Information and Operating Guide)

MAXXFAN

INTERIOR INSECT SCREEN

ROOF FLANGE





FOR ADDITIONAL PRODUCTS, ACCESSORIES OR PRODUCT INFORMATION, PLEASE VISIT www.AIRXCEL.com AIRXCEL, INC. - RV PRODUCTS DIVISION • 3050 N. St. Francis St • Wichita, KS 67219 • 316.832.3400

FOR ADDITIONAL PRODUCTS, ACCESSORIES OR PRODUCT INFORMATION, PLEASE VISIT www.AIRXCEL.com AIRXCEL, INC. - RV PRODUCTS DIVISION • 3050 N. St. Francis St • Wichita, KS 67219 • 316.832.3400 PN: 19764675. REV A. 11-2015